


# SHYFT STS OPERATING MANUAL

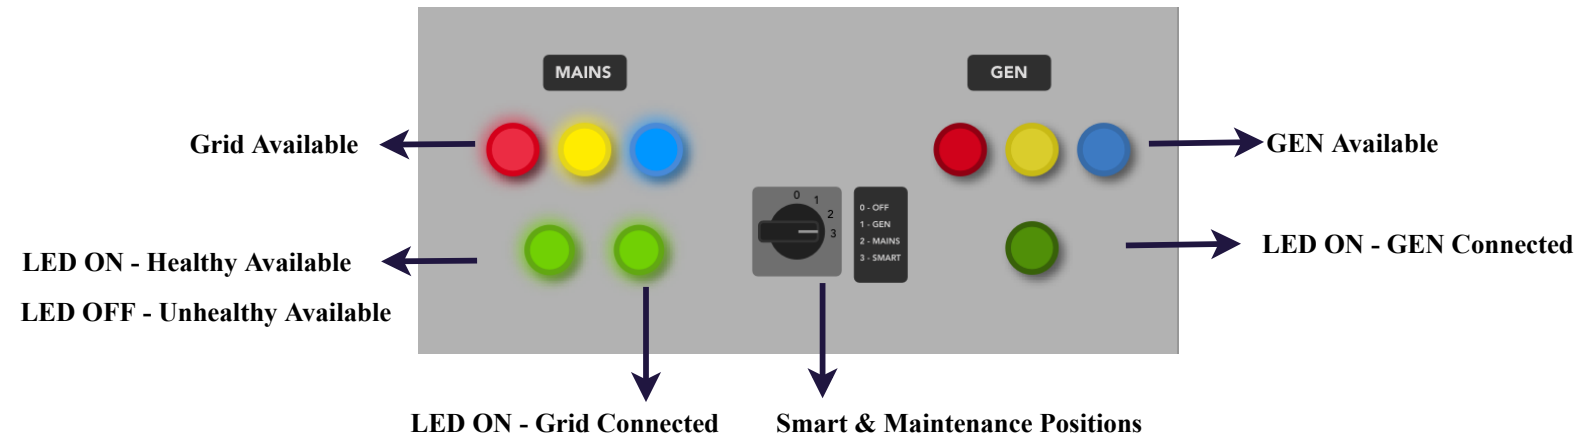

## How to use SHYFT STS in Smart Position

**STEP 1**

Grid is connected in Smart Position  
*Default Mode*

**STEP 2**

Grid is not available

**STEP 3**

Press AUTO button on Gen

**STEP 3.1**

Switch to Gen 1 or Gen 2 or skip to S.4

**STEP 4**

Turn SHYFT to Position "3" Smart

**STEP 5**

Press the silver GEN button or switch remotely from SHYFT Connect App

**STEP 6**

Gen is connected

## How to use SHYFT in Maintenance Positions

**STEP 1**

Grid is connected in Maintenance Position

**STEP 2**

Grid is not available

**STEP 3**

Turn SHYFT to Position "0"- OFF

**STEP 4.0**

Press Manual button on Gen  
Press "On" button on Gen

**STEP 4.1**

Switch to Gen 1 or Gen 2 or skip to S.5

**STEP 5**

Turn SHYFT to Position "1"- GEN

**STEP 6**

Gen is connected

**STEP 7**

Grid is available

**STEP 8**

Turn SHYFT to Position "2"- MAINS (GRID)

**STEP 9**


Press "Off" button on Gen

**STEP 10**

Grid is connected

## Wake SHYFT

Hold the silver GRID button for 5 secs to wake SHYFT. The display screen will flash 3 times when successful

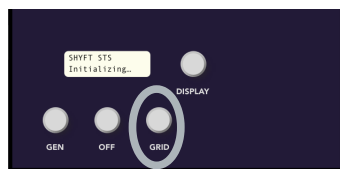


## Reset SHYFT

Hold the silver RESET button on the side for 15 secs to reset SHYFT. The display screen will flash 3 times



## Disconnect SHYFT

Turn SHYFT to Position "0" OFF

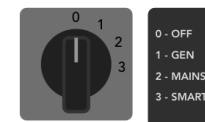

For Technical Support or troubleshooting,  
Contact: [support@shyftpower.com](mailto:support@shyftpower.com)